

STAGE SNOW MACHINE USES A GUIDE

(CONSUMER MUST-READ)

## WELCOME TO SNOW MACHINE

1. When receiving the new snow machine. open the package, check carefully whether the machine is damaged or the accessories are lost, if problems found please contact the distributor.
2. Open the cover of the liquid medicine jug and pour the special snow liquid into the jug.
3. Use the standard 3-core shielded signal cable to connect the control box, the main frame and the by-frame.
4. Insert the plug of the power supply into the power supply socket of the back panel of the machine, turn the power supply switch of the machine. ON/OFF to ON and then the red indication light on the control box will be on (POWER).
5. Turn the spln switch (SNOW ON/OFF) on the control box to ON, the green indication light on the control box will be on (IN USE) and there is snow spurting out.
6. Adjust the potentiometer knob (ONT PUT) in the manual control box to control the volume of the snow.
7. Turn the switch (AIR VOLUME SWITCH) on the back panel of the snow machine to adjust the rev of the olr pump, min, and max, rev (MIN-minimum, MAX-maximum) available.

### SNOW MACHINE-600w

#### Techniccal Parameters:

Voltage: AC220V-110V 50-60Hz

Power: 600W

Loading volume: 1L

Coverage: 30m<sup>2</sup>

### SNOW MACHINE-1200w

#### Techniccal Parameters:

Voltage: AC220V-110V 50-60Hz

Power: 1200W

Loading volume: 5L

output: APPROX 140MLMIN

### SNOW MACHINE-1500w

#### Techniccal Parameters:

Voltage: AC220V-110V 50-60Hz

Power: 1500W

Loading volume: 5L

output: APPROX 140MLMIN