



PA-12MUB  
PA-15MUB

# PROFESSIONAL SOUND 12"/15" 2-WAY MOLDED LOUDSPEAKER User's Manual



Made in China

 
### 1.Packing Contents

- 1 x speaker
- 1 x remote control
- 1 x user's guide
- 1 x power cable
- 2 x wireless microphone

### 2.Specifications

MODEL	PA-12MUB	PA-15MUB
Type	ACTIVE SPEAKER	ACTIVE SPEAKER
Input	AC100-240V, 50/60Hz DC12V, or Battery	AC100-240V, 50/60Hz DC12V, or Battery
Woofers	12 inch	15 inch
Voice coil	1.5" (38mm)	1.5" (38mm)
Magnet	30 Oz	40 Oz
Sensitivity	91dB(+/-3dB)	91dB(+/-3dB)
Frequency response	40Hz-20KHz	40Hz-20KHz
Tweeter	25mm	25mm
Power	120W	130W
Function	USB, SD,Bluetooth	USB, SD, Bluetooth
Remote control	Yes	Yes
Battery capacity	12V, 5AH	12V, 7AH

### 3.Amplifier

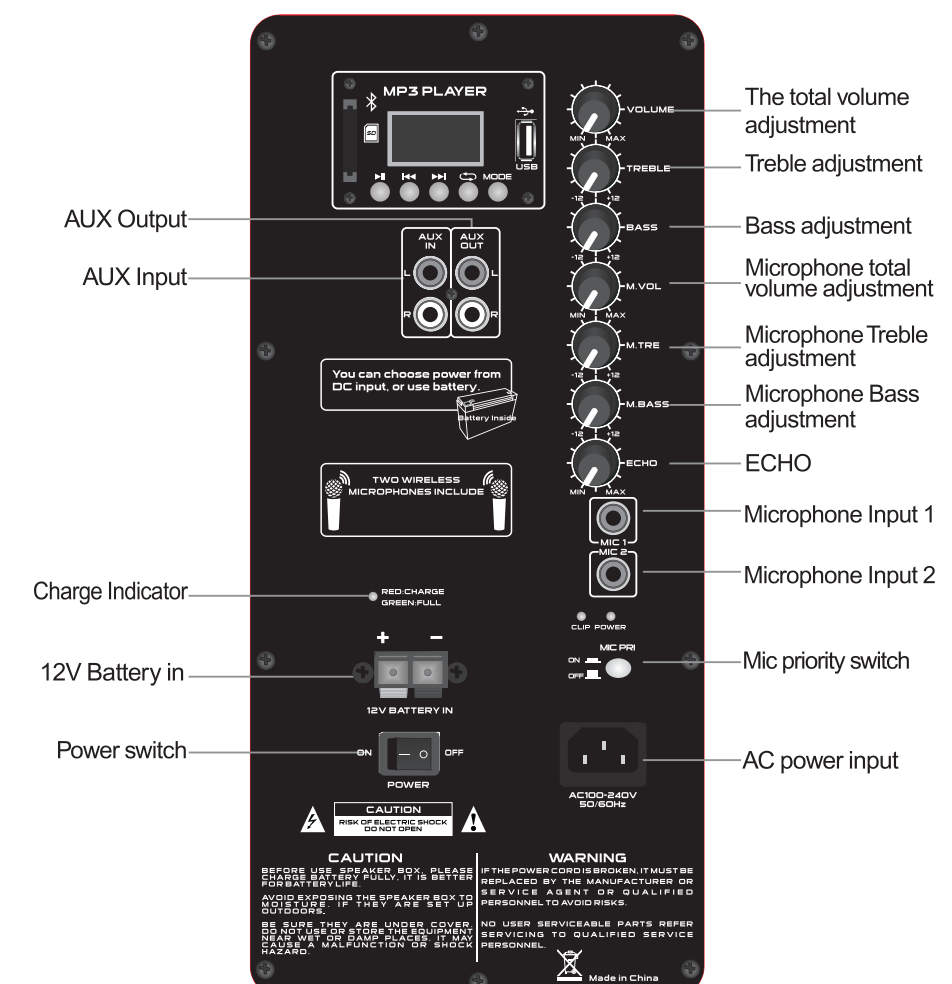


PA-12MUB Control Panel

通用说明书

尺寸: 210\*435mm


材质: 80克双胶正反单色印刷

 图号;BTK2.932.

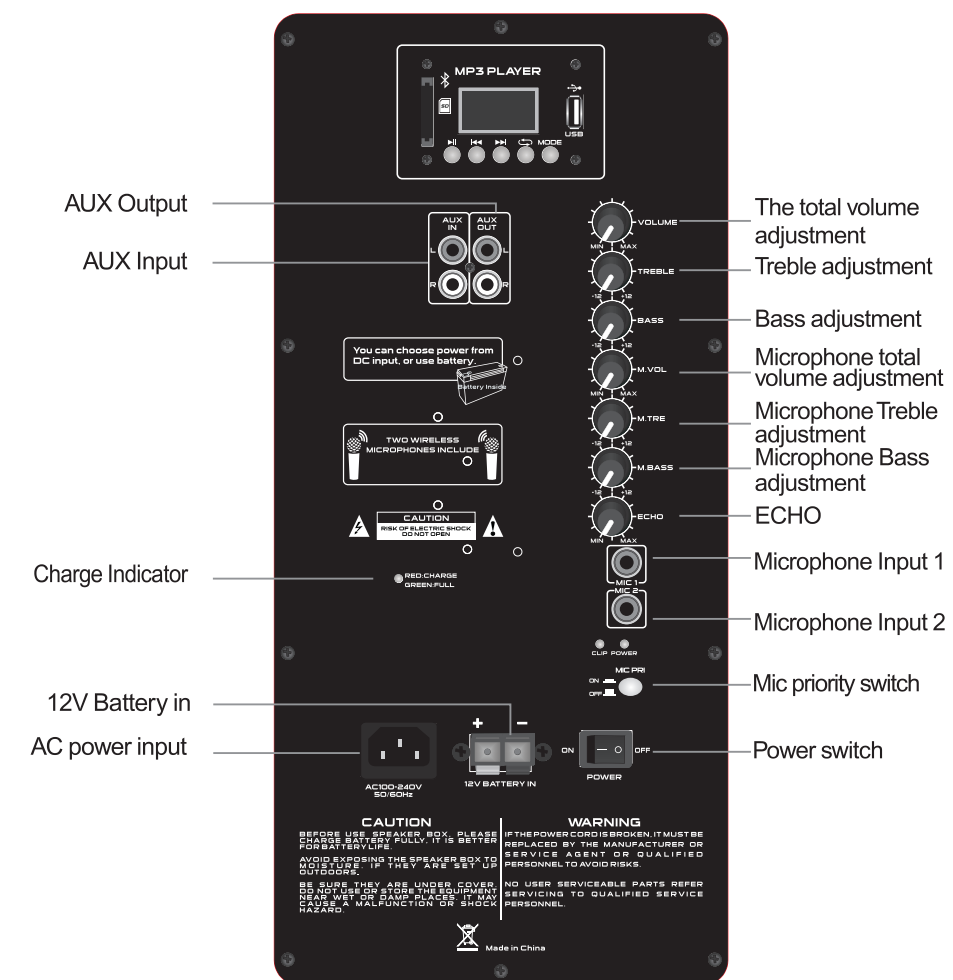

PA-15MUB Control Panel

#### 4. MP3 PLAYER

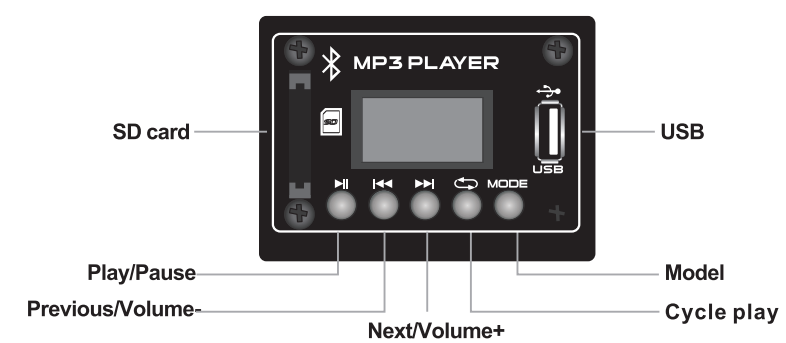 


- SD card slot : Use it to insert a SD card with Mp3 files.
- Play /Pause : Press to play a song or pause while playing a song.
- Previous /Volume-: Press once to jump previous song/Press and Hold to diminish the volume level.
- Next/Volume +: Press once to jump next song /press and hold to raise The volume level.
- Cycle play: To select a player mode , the options are:  
-One : Select this to play current song indefinitely  
-All : With this option you can repeat all music
- Model : Select an operating modality ,the options are SD or USB. FM Bluetooth.
- USB input.

#### Conection Bluetooth

 - 1.To pair the speaker with a Bluetooth phone or audio device, press"MODE" repeatedly on the MP3 player until select this mode.
2. Put your phone or device to be used in Bluetooth device discovery mode.
- 3.When your phone or device shows the "BLUETOOTH" device, confirm the link.

#### 5. Remote control

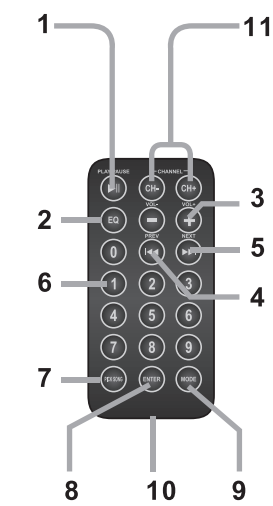

1. Press to play a song or pause while playing a song .Program radio FM stations.
2. In play mode press to set one equalizer mode.
3. Vol+ /Vol-
4. Previous: Press once to jump previous song , press and hold to rewind.
5. Next /: Press once to jump next song,press and hold to fast-froward .
6. Keys :Use this key to select the number of a desired track.
7. Pick song :Allows you to select the song want to listen to so direct ,for example:if you want to hear the song no. 11, first press the number 11 then press this button.
8. ENTER : Choose repeat mode.
9. MODEL :Select an operating modality ,the options are SD/USB.FM radio and AUX.
10. Battery compartment ( CR2025)
- 11.select a FM frequency.

#### 6. Caution

- Avoid exposing the speaker box to moisture. If they are set up outdoors, Be sure they are under cover.
- Do not use or store the equipment near wet or damp places. It may cause A malfunction or shock hazard.
- If the power cord is broken, it must be replaced by the manufacturer Or service agent or qualified personnel to avoid risks.
- To reduce the risk of fire or electric shock. do not expose this equipment to Rain or moisture.
- Clean only with a soft, dry cloth.