


Kramer Electronics, Ltd.

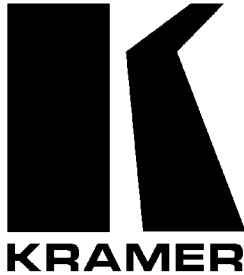

USER MANUAL

Model:

TP-114

1:4 XGA/HD DA/CAT5 Transmitter

Contents

1	Introduction	1
2	Getting Started	1
2.1	Getting Started	1
3	Overview	3
3.1	About the Power Connect Feature	3
3.2	Shielded Twisted Pair (STP) / Unshielded Twisted Pair (UTP)	3
3.3	About the TP-114	4
3.4	Recommendations for Achieving the Best Performance	4
4	Your TP-114 1:4 XGA / HD DA /CAT5 Transmitter	5
5	Configuring a TP-114 XGA / HD Line Transmitter – DA System	7
5.1	Wiring the CAT5 LINE IN / LINE OUT RJ-45 Connectors	9
6	Technical Specifications	10

Figures

Figure 1:	TP-114 1:4 XGA / HD DA /CAT5 Transmitter	5
Figure 2:	TP-114 1:4 XGA / HD DA /CAT5 Transmitter (Top Side Panel)	5
Figure 3:	TP-114 1:4 XGA / HD DA /CAT5 Transmitter (Lower Side Panel)	5
Figure 4:	TP-114 1:4 XGA / HD DA /CAT5 Transmitter (Underside Panel)	6
Figure 5:	Configuring a TP-114 XGA / HD Line Transmitter – DA	8
Figure 6:	CAT5 PINOUT	9

Tables

Table 1:	TP-114 1:4 XGA / HD DA /CAT5 Transmitter Features	6
Table 2:	TP-114 1:4 XGA / HD DA /CAT5 Transmitter (Underside Panel) Features	6
Table 3:	CAT5 PINOUT	9
Table 4:	Technical Specifications of the TP-114 (with 100m CAT5 cable)	10

1 Introduction

Welcome to Kramer Electronics (since 1981): a world of unique, creative and affordable solutions to the infinite range of problems that confront the video, audio and presentation professional on a daily basis. In recent years, we have redesigned and upgraded most of our line, making the best even better! Our 500-plus different models now appear in 8 Groups¹, which are clearly defined by function. Congratulations on purchasing your Kramer TOOLS: **TP-114 XGA / HD Line Transmitter – DA**, which is ideal for:

- Presentation and multimedia applications
- Long range graphics distribution for schools, hospitals, security, and stores

The package includes the following:

- **TP-114 1:4 XGA / HD DA /CAT5 Transmitter**
- Power adapter (12V DC Input)
- This user manual²

2 Getting Started

We recommend that you:

- Unpack the equipment carefully and save the original box and packaging materials for possible future shipment
- Review the contents of this user manual
- Use Kramer high performance high resolution cables³

2.1 Getting Started

This quick start chart summarizes the basic setup and operation steps.

1 GROUP 1: Distribution Amplifiers; GROUP 2: Video and Audio Switchers, Matrix Switchers and Controllers; GROUP 3: Video, Audio, VGA/XGA Processors; GROUP 4: Interfaces and Sync Processors; GROUP 5: Twisted Pair Interfaces; GROUP 6: Accessories and Rack Adapters; GROUP 7: Scan Converters and Scalers; and GROUP 8: Cables and Connectors


2 Download up-to-date Kramer user manuals from the Internet at this URL: <http://www.kramerelectronics.com>

3 The complete list of Kramer cables is on our Web site at <http://www.kramerelectronics.com>

Step 1: Connect the inputs/outputs - see section 5

On the TP-114, connect:

- A computer graphics source to the XGA input
- The XGA output to a local display
- Up to 4 of the line outputs to the line inputs (for example, on TP-120 XGA Line Receivers), via UTP cabling

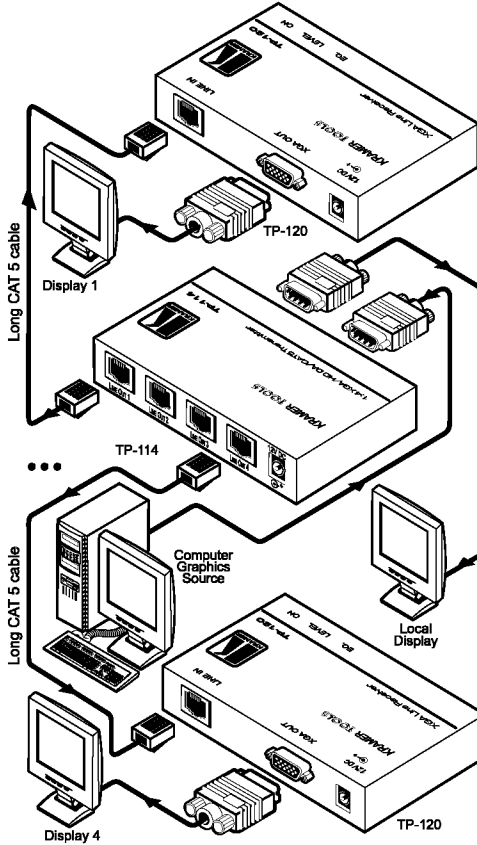

Step 2: Connect the power

Step 3: Change the polarity - see section 4

You can change the polarity of decoding H and V Sync for video (see Figure 4 and Table 2):



3 Overview

This section describes:

- The power connect feature, see section 3.1
- Using shielded twisted pair (STP) / unshielded twisted pair (UTP), see section 3.2
- A summary of the **TP-114**, see section 3.3
- Recommendations for achieving the best performance, see section 3.4

3.1 About the Power Connect Feature

The Power Connect feature lets you power a transmitter / receiver system by connecting just one power adapter— to either the transmitter or the receiver. The other unit is fed via the cable connecting between the transmitter/receiver. The Power Connect feature applies as long as the cable can carry power. The distance does not exceed 50 meters on standard CAT5 cable, for longer distances, heavy gauge cable should be used¹.

For a CAT5 cable exceeding a distance of 50 meters, separate power supplies should be connected to the transmitter and to the receiver simultaneously.

3.2 Shielded Twisted Pair (STP) / Unshielded Twisted Pair (UTP)

The decision whether to use shielded twisted pair (STP) cable or unshielded twisted pair (UTP) cable depends on the nature of the application.

It is recommended that in applications with high interference, shielded twisted pair (STP) cable is used. However, the shield itself does create a capacitance that degrades the frequency response of the machines. For shorter distances, of 50m or so, shielded twisted pair (STP) cable is preferred because it provides protection from interference (degradation is not apparent).

For long range applications, unshielded twisted pair (UTP) cable is preferred. However, the unshielded twisted pair (UTP) cable should be installed far away from electric cables, motors and so on, which are prone to create electrical interference.

¹ CAT5 cable is still suitable for the video/audio transmission, but not for feeding the power at these distances

3.3 About the TP-114

Your Kramer TOOLS **TP-114** 1:4 XGA / HD DA /CAT5 Transmitter:

- Receives a computer graphics¹ / HD² signal and transmits it over four CAT5 cables to appropriate receivers³
- Has a resolution of up to UXGA, and a transmission range of more than 300 ft. (more than 100 meters)
- Can change the polarity of decoding H and V Sync for video
- Includes the power connect feature (see section 3.1)
- Is 12VDC fed

3.4 Recommendations for Achieving the Best Performance

Achieving the best performance means:

- Connecting only good quality connection cables, thus avoiding interference, deterioration in signal quality due to poor matching, and elevated noise levels (often associated with low quality cables)
- Avoiding interference from neighboring electrical appliances that may adversely influence signal quality, and positioning your **TP-114** away from moisture, excessive sunlight and dust

1 The terminology XGA is used throughout this manual, where this implies any RGBHV signal on an HD15 connector having a resolution from VGA up to UXGA

2 The TP-114 accepts high definition resolutions: 480p, 576p, 720p, 1080i, and 1080p

3 Note that the CAT5 connectors exclude audio

4 Your TP-114 1:4 XGA / HD DA /CAT5 Transmitter

Figure 1, Figure 2, Figure 3 and Table 1 define the **TP-114**:

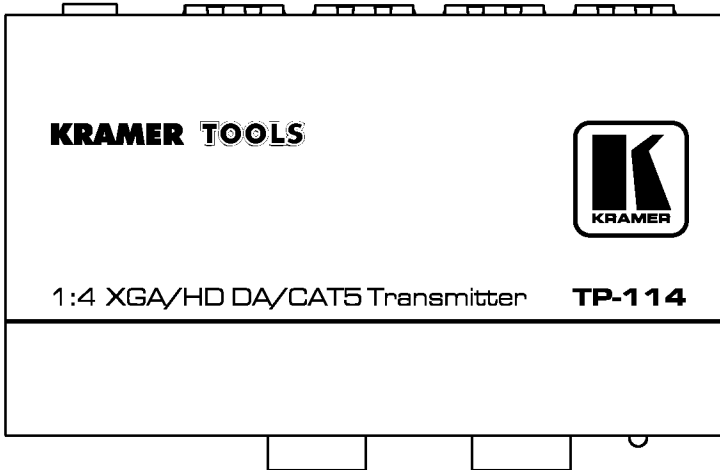


Figure 1: TP-114 1:4 XGA / HD DA /CAT5 Transmitter

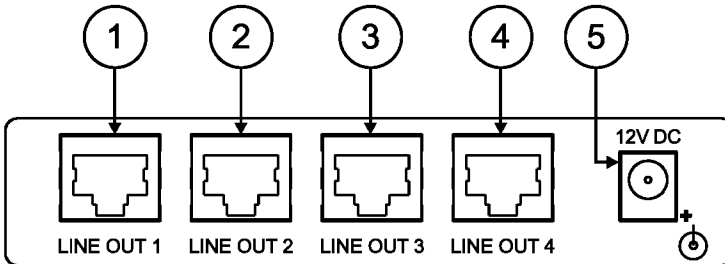


Figure 2: TP-114 1:4 XGA / HD DA /CAT5 Transmitter (Top Side Panel)

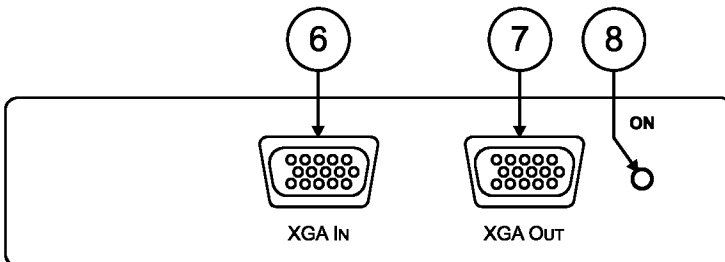


Figure 3: TP-114 1:4 XGA / HD DA /CAT5 Transmitter (Lower Side Panel)

Table 1: TP-114 1:4 XGA / HD DA /CAT5 Transmitter Features

#	Feature	Function
1	LINE OUT 1 RJ-45 Connector	Connects to ¹ the LINE IN RJ-45 connector on the (first) TP-120 XGA Line Receiver ²
2	LINE OUT 2 RJ-45 Connector	Connects to ¹ the LINE IN RJ-45 connector on the (second) TP-120 XGA Line Receiver ²
3	LINE OUT 3 RJ-45 Connector	Connects to ¹ the LINE IN RJ-45 connector on the (third) TP-120 XGA Line Receiver ²
4	LINE OUT 4 RJ-45 Connector	Connects to ¹ the LINE IN RJ-45 connector on the (fourth) TP-120 XGA Line Receiver ²
5	12V DC	+12V DC connector for powering the unit
6	XGA IN HD15F Connector	Connect to the XGA source
7	XGA OUT HD15F Connector	Connect to the XGA acceptor
8	ON LED	Illuminates when receiving power

Figure 4 and Table 2 define the **TP-114** underside panel:

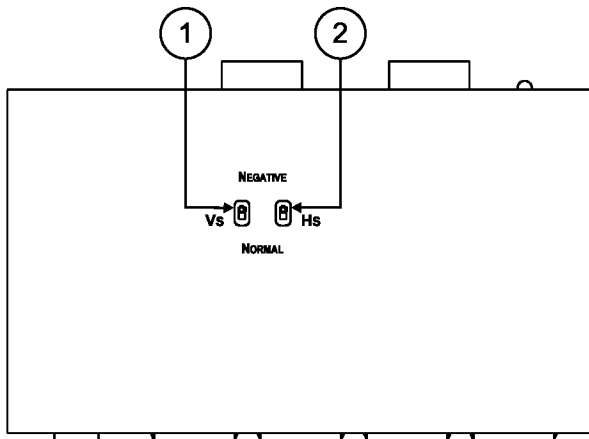


Figure 4: TP-114 1:4 XGA / HD DA /CAT5 Transmitter (Underside Panel)

Table 2: TP-114 1:4 XGA / HD DA /CAT5 Transmitter (Underside Panel) Features

#	Feature	Function
1	VS Switch	Slide the switch up ³ to change the VS polarity to NEGATIVE polarity ⁴ ; slide the switch down to NORMAL to retain the polarity
2	HS Switch	Slide the switch up ³ to change the HS polarity to NEGATIVE polarity ⁴ ; slide the switch down to NORMAL to retain the polarity

1 Using a UTP CAT5 cable with RJ-45 connectors at both ends (the PINOUT is defined in Table 3 and Figure 6)

2 Refer to the separate user manual: PT-110, PT-120, TP-120, WP-110, which can be downloaded from the Internet at this URL: <http://www.kramerelectronics.com>. Also, see the example illustrated in Figure 5

3 By default, both switches are set in the down position

4 Downgoing syncs

5 Configuring a TP-114 XGA / HD Line Transmitter – DA System

You can use the **TP-114** with four **TP-120** units¹ to configure a 1:4 XGA / HD DA /CAT5 Transmitter system. This will let you transmit a computer graphics / HD signal to four displays via long line CAT5 UTP cabling.

To connect the **TP-114** to four **TP-120** units, as the example in Figure 5 illustrates, do the following:

1. On the **TP-114**, connect the XGA / HD source (for example, a computer graphics / HD source) to the XGA IN HD15F connector, and connect the line output RJ-45 connector²:
 - OUT 1 connector to the LINE IN RJ-45 connector on the first **TP-120**
 - OUT 2 connector to the LINE IN RJ-45 connector on the second **TP-120**
 - OUT 3 connector to the LINE IN RJ-45 connector on the third **TP-120**
 - OUT 4 connector to the LINE IN RJ-45 connector on the fourth **TP-120**
2. On the four **TP-120** units, connect the:
 - XGA OUT HD15F connector of the first **TP-120** unit to the XGA / HD acceptor (for example, Display 1)
 - XGA OUT HD15F connector of the second **TP-120** unit to the XGA / HD acceptor (for example, Display 2)
 - XGA OUT HD15F connector of the third **TP-120** unit to the XGA / HD acceptor (for example, Display 3)
 - XGA OUT HD15F connector of the fourth **TP-120** unit to the XGA / HD acceptor (for example, Display 4)
3. On each Kramer TOOL, connect the 12V DC power adapter to the power socket and connect the adapter to the mains electricity.
The signal from the XGA source is transmitted via the CAT5 cables, decoded and converted at the each of the XGA OUT HD15F connectors to the XGA acceptors.
4. On the **TP-120** units, if necessary:
 - Set the H SYNC and V SYNC switches³ on the underside
 - Adjust⁴ the video output signal level and/or cable compensation equalization level

1 Refer to the separate user manual: PT-110, PT-120, TP-120, WP-110, which can be downloaded from the Internet at this URL: <http://www.kramerelectronics.com>

2 Via UTP cabling (with a range of more than 300ft (>100m)). For details of how to wire a CAT5 LINE IN / LINE OUT RJ-45 connector, see section 5.1

3 By default, both switches are set down (for negative V SYNC and H SYNC polarity)

4 Use a screwdriver to carefully rotate the trimmer, adjusting the appropriate level

5. On the **TP-114**, if necessary, set the VS and HS switches¹ on the underside

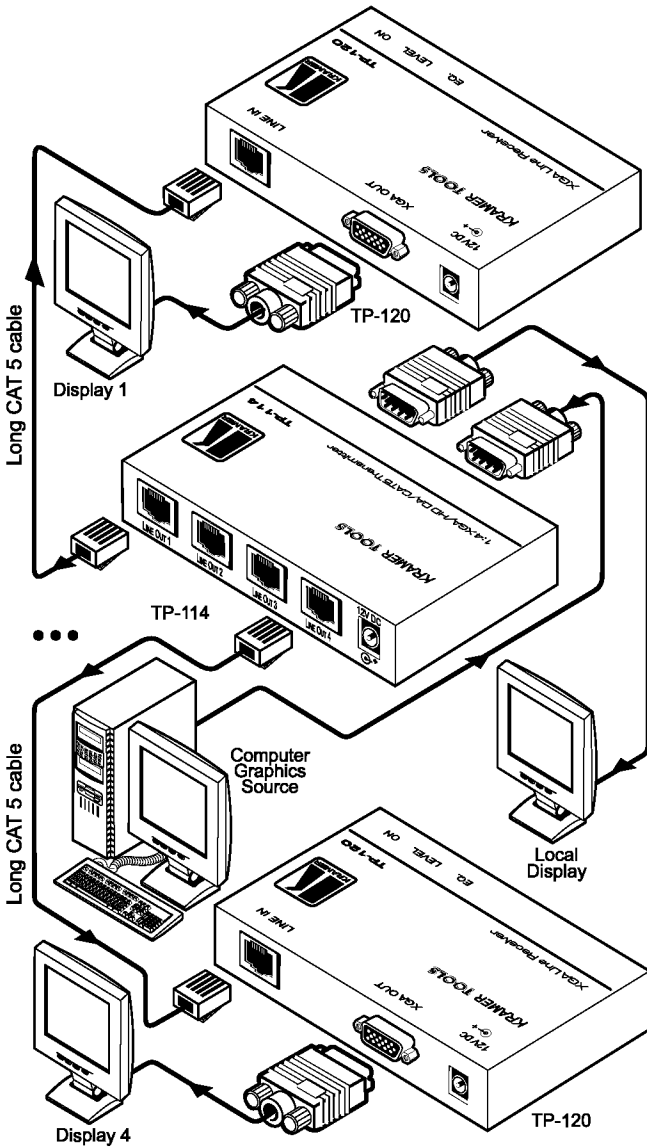


Figure 5: Configuring a TP-114 XGA / HD Line Transmitter – DA

¹ By default, both switches are set down (to NORMAL) to retain the VS and HS polarity


5.1 Wiring the CAT5 LINE IN / LINE OUT RJ-45 Connectors

Table 3 and Figure 6 define the UTP CAT5 PINOUT, using a straight pin to pin cable with RJ-45 connectors:

Table 3: CAT5 PINOUT

EIA /TIA 568A		EIA /TIA 568B	
PIN	Wire Color	PIN	Wire Color
1	Green / White	1	Orange / White
2	Green	2	Orange
3	Orange / White	3	Green / White
4	Blue	4	Blue
5	Blue / White	5	Blue / White
6	Orange	6	Green
7	Brown / White	7	Brown / White
8	Brown	8	Brown
Pair 1		Pair 1	4 and 5
Pair 2		Pair 2	1 and 2
Pair 3		Pair 3	3 and 6
Pair 4		Pair 4	7 and 8

Figure 6: CAT5 PINOUT

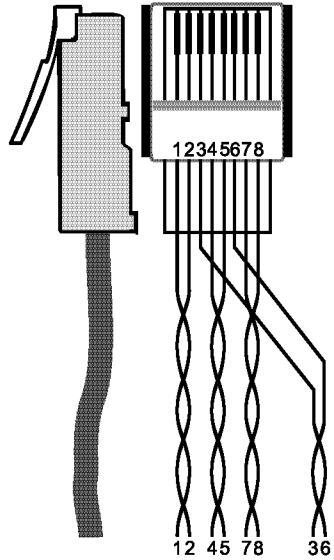

6 Technical Specifications

Table 4 includes the technical specifications¹ of the **TP-114**.

Table 4: Technical Specifications of the TP-114 (with 100m CAT5 cable)

INPUT:	1 XGA on an HD15F connector
OUTPUTS:	1 XGA on an HD15F connector 4 RJ-45 OUT connectors
MAX. OUTPUT LEVEL:	1.8Vpp (XGA), 1.6Vpp (CAT5)
HIGHEST RESOLUTION ² :	UXGA, 1080P
DIFF. GAIN ² :	0.03% (XGA), 7% (CAT5)
DIFF. PHASE ² :	0.05° (XGA), 0.08° (CAT5)
K-FACTOR ² :	<0.05% (XGA), 0.3% (CAT5)
S/N RATIO ² :	75dB (XGA), 73dB (CAT5)
CONTROLS ² :	2 switches for sync inversion
COUPLING ² :	DC (XGA), AC (CAT5)
POWER SOURCE:	12 VDC 880mA ³
DIMENSIONS:	12cm x 7.15cm x 2.76cm (4.7" x 2.8" x 1.08"), W, D, H
WEIGHT:	0.3 kg. (0.67 lbs.) approx.
ACCESSORIES:	Power supply

1 Specifications are subject to change without notice

2 For the TP-114 Transmitter/ TP-120 Receiver pair

3 Sufficient for feeding two receivers via CAT5

LIMITED WARRANTY

Kramer Electronics (hereafter *Kramer*) warrants this product free from defects in material and workmanship under the following terms.

HOW LONG IS THE WARRANTY

Labor and parts are warranted for seven years from the date of the first customer purchase.

WHO IS PROTECTED?

Only the first purchase customer may enforce this warranty.

WHAT IS COVERED AND WHAT IS NOT COVERED

Except as below, this warranty covers all defects in material or workmanship in this product. The following are not covered by the warranty:

1. Any product which is not distributed by Kramer, or which is not purchased from an authorized Kramer dealer. If you are uncertain as to whether a dealer is authorized, please contact Kramer at one of the agents listed in the web site www.kramerelectronics.com.
2. Any product, on which the serial number has been defaced, modified or removed.
3. Damage, deterioration or malfunction resulting from:
 - i) Accident, misuse, abuse, neglect, fire, water, lightning or other acts of nature
 - ii) Product modification, or failure to follow instructions supplied with the product
 - iii) Repair or attempted repair by anyone not authorized by Kramer
 - iv) Any shipment of the product (claims must be presented to the carrier)
 - v) Removal or installation of the product
 - vi) Any other cause, which does not relate to a product defect
 - vii) Cartons, equipment enclosures, cables or accessories used in conjunction with the product

WHAT WE WILL PAY FOR AND WHAT WE WILL NOT PAY FOR

We will pay labor and material expenses for covered items. We will not pay for the following:

1. Removal or installations charges.
2. Costs of initial technical adjustments (set-up), including adjustment of user controls or programming. These costs are the responsibility of the Kramer dealer from whom the product was purchased.
3. Shipping charges.

HOW YOU CAN GET WARRANTY SERVICE

1. To obtain service on you product, you must take or ship it prepaid to any authorized Kramer service center.
2. Whenever warranty service is required, the original dated invoice (or a copy) must be presented as proof of warranty coverage, and should be included in any shipment of the product. Please also include in any mailing a contact name, company, address, and a description of the problem(s).
3. For the name of the nearest Kramer authorized service center, consult your authorized dealer.

LIMITATION OF IMPLIED WARRANTIES

All implied warranties, including warranties of merchantability and fitness for a particular purpose, are limited in duration to the length of this warranty.

EXCLUSION OF DAMAGES

The liability of Kramer for any effective products is limited to the repair or replacement of the product at our option. Kramer shall not be liable for:

1. Damage to other property caused by defects in this product, damages based upon inconvenience, loss of use of the product, loss of time, commercial loss; or:
2. Any other damages, whether incidental, consequential or otherwise. Some countries may not allow limitations on how long an implied warranty lasts and/or do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations and exclusions may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights, which vary from place to place.

NOTE: All products returned to Kramer for service must have prior approval. This may be obtained from your dealer. This equipment has been tested to determine compliance with the requirements of:

- EN-50081: "Electromagnetic compatibility (EMC);
generic emission standard.
Part 1: Residential, commercial and light industry"
- EN-50082: "Electromagnetic compatibility (EMC) generic immunity standard.
Part 1: Residential, commercial and light industry environment".
- CFR-47: FCC Rules and Regulations:
Part 15: "Radio frequency devices
Subpart B – Unintentional radiators"


CAUTION!

- Servicing the machines can only be done by an authorized Kramer technician. Any user who makes changes or modifications to the unit without the expressed approval of the manufacturer will void user authority to operate the equipment.
- Use the supplied DC power supply to feed power to the machine.
- Please use recommended interconnection cables to connect the machine to other components.





For the latest information on our products and a list of Kramer distributors, visit our Web site: www.kramerelectronics.com, where updates to this user manual may be found. We welcome your questions, comments and feedback.

 <p>Caution</p>	<p>Safety Warning: Disconnect the unit from the power supply before opening/servicing.</p>
---	---

